

Ball Machine Information:

If you are a club member and have 'received training' on the use and care of the machine from Ray or John Baurenfeind, Your name will be on a list in the Vistas Office. Using your Homeowners card, you may check out the ball machine from the Vista's Office for a two hour period. Court 4 has been the court that seems to work the best for the machine because the court floor slants slightly to the drain and therefore the balls will return to that area behind the machine.

Here are a few helpful hints:

Do not use the machine if it is raining.

If the ball is stuck, shut off the machine and pull the ball out.

Do not walk in front of the machine when retrieving balls.

Use of controls:

1. *Top Toggle Switch*- turns the machine on with a 15 second delay.

2. *Bottom Toggle Switch*- activates the degree of sideways movement back and forth.

3. *Big Black Knob* on the left changes the elevation- thus the distance. First, unscrew the knob, then move it to raise or lower the trajectory. When satisfied, tighten knob. This procedure can be done while the machine is running.

4. *Top Knob on the right*- controls the speed of the balls/how fast it is traveling. The higher the number, the harder they come at you-like a fast, hard hit volley.

5. *Bottom Knob on the right*: This controls the timing of the balls, how quickly they are ejected. The higher the number the faster they are ejected. A faster feed is good to use at the net when hitting volleys.

Please notify Ray immediately, if you have any problems.